

**IBM System 36/38**  
**Work Station Emulation**  
**Keyboard Templates**  
**Version 1.0**

© Copyright International Business Machines Corporation 1987


*Personal Series*

72X6160  
SX21-9882-0

Printed in U.S.A. June 1987

## Using the Keyboard Templates

Each key displayed on the keyboard templates has four possible rows. The keyboard mode needed to enter the character or function for each of the four rows is shown to the right. When a character or function uses both shifted and nonshifted modes, the symbol is centered on the key (for example, the Help key).

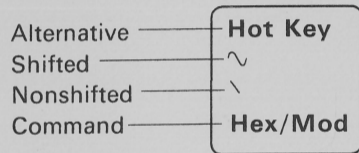

R36K004-1

## Status Indicators for 40-Column Mode

lc ge rr-cc GC SA II Sn KB or Ax GM SM  
Indicators are on when they appear in reverse image.

Ax	Work Station Address	II	Input Inhibited	SA	System Available
GC <sup>1</sup>	Graphics Display On	KB	Keystroke Buffering	Sn	Session Number
ge	Graphics Error Code	lc	line check	SM	Select Options Mode
GM	Graphics Mode	rr-cc	cursor location (row-column)		

<sup>1</sup>C, when it appears, indicates compressed aspect ratio.

## Status Indicators for 80-Column Mode

(Indicators are on when they appear in reverse image.)

lc ge rr-cc GC SA MW KS IM II Sn KB or Ax GM SM

Ax	Work Station Address	IM	Insert Mode	rr-cc	Cursor location (row-column)
GC <sup>1</sup>	Graphics Display On	KB	Keystroke Buffering	SA	System Available
ge	Graphics Error Code	KS	Keyboard Shift	Sn	Session Number
GM	Graphics Mode	lc	line check	SM	Select Options Mode
II	Input Inhibited	MW	Message Waiting		

<sup>1</sup>C, when it appears, indicates compressed aspect ratio.



